

Seats

n Adjusting seat position



- 1 Moves the seat forward
- 2 Moves the seat backward

n Adjusting seatback angle



- 1 Tilts the seatback forward
- 2 Reclines the seatback

n Adjusting seat cushion



- 1 Raises and lowers the front of the cushion
- 2 Raises and lowers the entire seat

n Adjusting lumbar support



- 1 Firmer
- 2 Softer

Outside Rear View Mirrors




- 1 Selects a mirror to adjust ("L": left or "R": right)
- 2 Adjusts the mirror up, down, in, or out using the switch

The mirrors will automatically angle downwards when the vehicle is reversing.

To disable this function, set the mirror select switch in the neutral position (between "L" and "R").

Steering Wheel

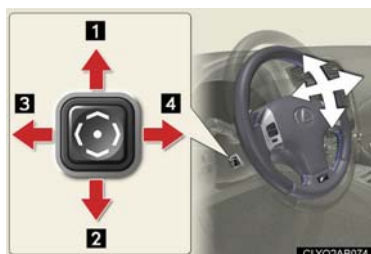

- 1 Up
- 2 Down
- 3 Away from the driver
- 4 Toward the driver

The steering wheel retracts automatically when the "ENGINE START STOP" switch is turned OFF to allow for easy exit and entry. The steering wheel returns automatically to its previously set position when the "ENGINE START STOP" switch is switched to ACCESSORY or IGNITION ON mode.

Driving and Seat Position Memory System

Your preferred driving position (the position of the driver's seat, steering wheel and the outside rear view mirrors) and front passenger seat position can be memorized and recalled with the touch of a button.

n Setting memory positions



Press the "SET" button, then within 3 seconds press one of the memory buttons ("1", "2", or "3") until you hear a beep.

The current position of the seat, as well as the position of the steering wheel and the outside rear view mirrors (for the driver's seat only) is recorded.


n Recalling memory positions



Press one of the memory buttons ("1", "2", or "3").

n Linking driving position memory with door unlock operation (driver's seat only)



While holding down the desired memory button, press and hold  on the wireless remote control or door lock switch until you hear a beep.

To prevent triggering of the alarm, open one of the doors within 180 seconds after the beep is heard.

Linking driving position memory to the door unlock operation allows the memory position to be recalled automatically when the driver's door is opened. (The linked function does not operate if the driver's door is unlocked using the mechanical key or manually from inside the vehicle.)

Head Restraints


n Vertical adjustment (front seats)



To raise: push the head restraint upward.

To lower: push the head restraint down while pressing the lock release button.

n Folding (rear seats only)

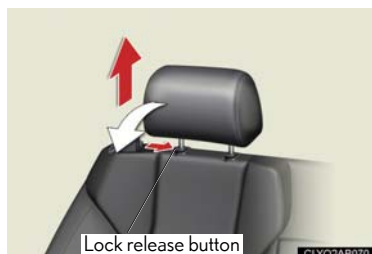

Pull the head restraint up while pressing the lock release button.

Seat Belts

n Adjusting shoulder belt height (front seats only)



To raise: push the anchor upward.

To lower: depress the button and push the anchor down.


n Seat belt comfort guides (rear seats only)



If the shoulder belt sits close to the neck, slide the comfort guide forward.

Anti-glare Inside Rear View Mirror

The anti-glare mirror uses a sensor to detect light from vehicles behind and automatically reduces glare.

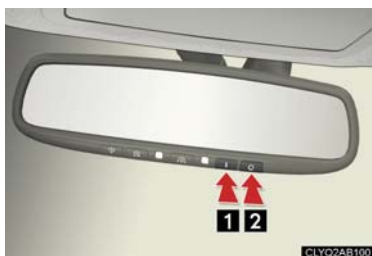


► Without compass

1 Turns automatic mode on

2 Turns automatic mode off

The indicator comes on when automatic mode is turned on.

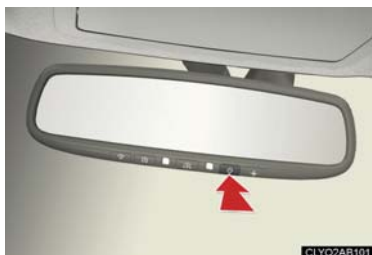

► With compass

Turns automatic mode on/off

The indicator comes on when automatic mode is turned on.